

# **BORNIT®- Crack Tape**





**BORNIT® - The brand name for builders** 



# **BORNIT®- Crack Tape**



BORNIT- Crack Tape is used for sealing cracks by width up to 5 mm.



## Important: Asphalt surface has to be dry before application!

The surface must be free from dust, dirt, grease and oil. For better adhesion can be use a thin bitumen paint or primer (picture 1). It's not necessary for clean and warm asphalt surfaces. After drying the bonding primer (picture 2).





BORNIT-Crack Tape must be lay out (picture 3) and pressed on the crack area by roller, car tire or pounder (picture 4).


To avoid the tape sticking at the work equipment, it's recommended to give some finely ground sand at the surface or remove the separating paper after pressing (picture 5).





By moving traffic the tape become compressed and interlocked in the crack (picture 6).

Really easy to install – in very short time the crack is permanent elastic-plastic closed and the road protected against penetrating water.

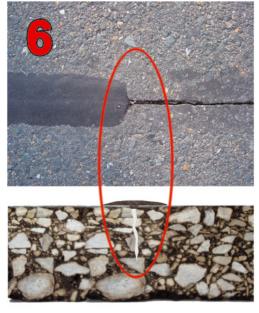

## **BORNIT-Werk Aschenborn GmbH**

Reichenbacher Straße 117

08056 Zwickau

Telefon: +49 (0) 3 75/ 27 95 - 0 Telefax: +49 (0) 3 75/ 27 95 - 150

E-Mail: info@bornit.de Internet: www.bornit.de Address/ stamp

## Please:

- O call us
- O send us information by post
- O have your representative call by

